
 


Option A: Fix product by the wall


- 1. Fix $2 \times L$ racks on the top of the product by using $2 \times M3$ screws.
- 2. Mark the hole on wall. Drill 2 x Ø6mm holes on wall according to the Mark.
- 3. Fix 2 x screw studs in hole.
- 4. Fix 2 x M4 screws to secure the unit in place.

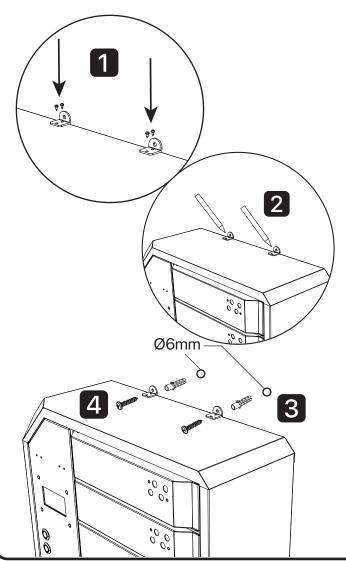


Option B: Hang on wall




- 1. Drill 2 x Ø6mm holes (Suggest: 1.6m height) on wall according to the drawing. Fix 2 x screw studs and 2 x screws on wall (not included).
- 2. Lift 5mm space for hanging WM10 on wall.

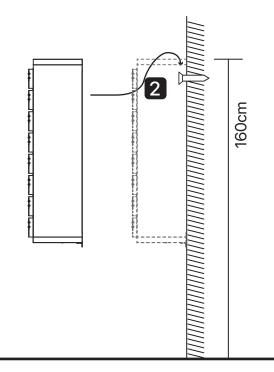


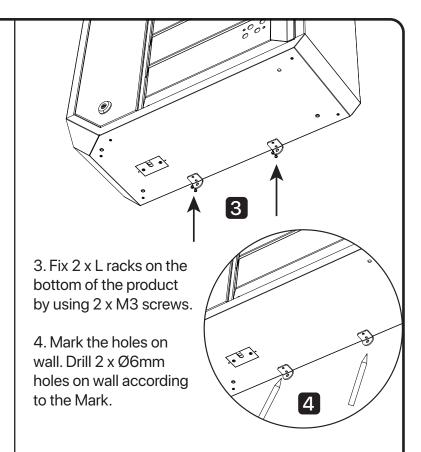

- 5. Fix 2 x screw studs in holes.
- 6. Fix 2 x M4 screws to secure the unit in place.

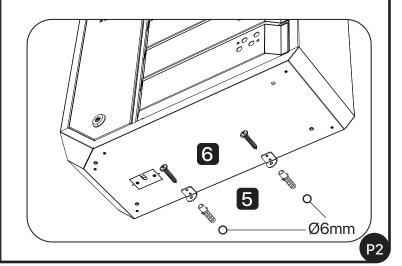


Option C: Fix product on ground

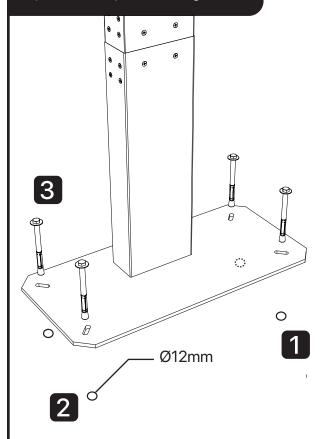


- 1. Mark the holes on floor.
- 2. Drill 4 x \emptyset 12mm holes on floor according to the Mark.
- 3. Bolt the base plate on the ground with
- 4 x expansion screws.


B. Replace Cable

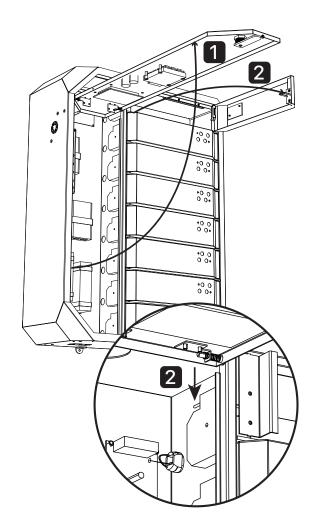


- 1. Open the control box door with key provided.
- 2. Unlock the door by pressing the button on the lock.

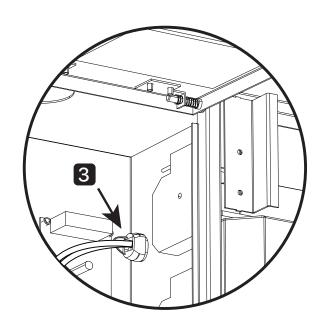


- 3. Open the cable clip.
- 4. Unplug USB Cable.
- 5. Take out the cable through the hole.

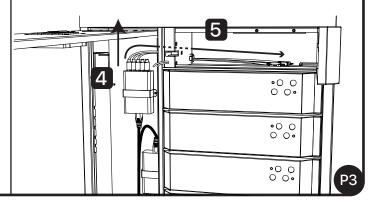

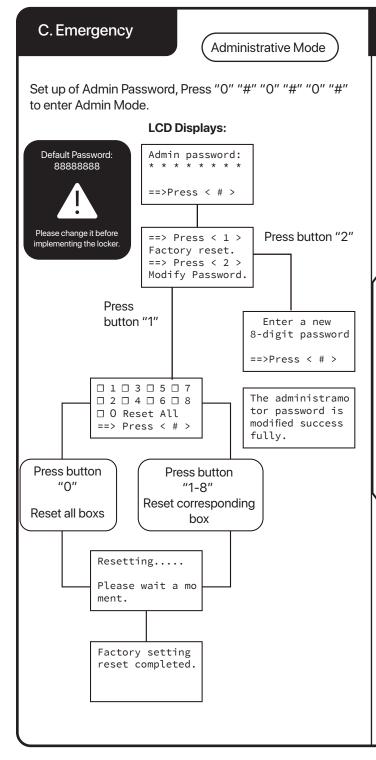

D. Reset to factory admin password

- 10. Open the front door by using the key provided.
- 11. Hold the angle of the front door by using the metal stick.

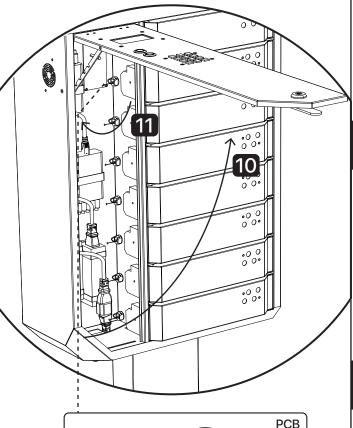


Reset to factory

admin password

Specker volume

controller

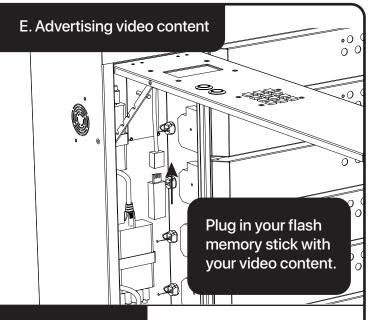

F. Specifications

- Model no.: PPL8
- Input: AC 100 240V / 50~60Hz
- Output (per locker box): 5V/2.4A Max
- Charging Cable (per locker box):
- Micro USB Cable + Lightning Cable + Type C Cable
- Dimensions(PPL8 only): 480 x 200 x 668 mm
- Dimensions(PPL8 with Floor Stand): 590 x 280 x 1660mm
- Material (Housing): Cold Rolled Steel

G. Notes on use

- To Prevent fire on shock hazard, do not expose the device to rain or moisture.
- To avoid electric shock, please do not disassemble the device.
- If trouble occurs, immediately disconnected the device from wall socket.

Maintenance

- Wipe the device with a soft dry cloth to prevent dust build up.
- keep the device away from strong volatile solvents or chemicals, such as thinner, benzene, alcohol, pesticide, rubber or vinyl plastic etc, which may lead to deterioration or damage to your devices.