

G. Specifications :

Model	CS9
Input	100-240 Vac 50/60Hz
Output	Retractable Cables: 2 x PD45W/20W, 4 x 5V/3A(max), USB Port QC 3.0 Qi Wireless Charging Pad 10W Universal Socket 1 x 100-240 Vac 5A max 50/60 Hz Max Power 100 Vac 600W 50/60 Hz - 240 Vac 1200W 50/60 Hz

H. Warranty and Liability:

- We grant a conditional 1 year warranty for the device.
- The warranty does not cover accidental damage or vandalism caused to the product.
- If any defects or damage is found on your device, please contact us for troubleshooting. If the issue can not be resolved remotely, we will take the product back within 30 days of purchase for a full refund. If after the 30 day period, we will exchange for a new unit.
- We are not liable for damage to person or property caused by improper installation or operation not described in this guide. Any alteration and/or modification of the product or its accessories immediately voids the warranty.
- Any use other than described in this user manual is not permitted and causes loss of warranty, loss of guarantee, and non-liability.

I. Note on Waste Disposal:



In accordance with the European WEEE directive, electrical and electronic equipment must not be disposed with consumer waste. The consumer is committed by law to deposit electrical and electronic devices to public collecting for free. Particulars are regulated in national right.


The symbol on the product, in the manual or at the packaging alludes to these terms.



ATTENTION!

Please read the user manual completely and carefully. It is part of the product and includes important information for proper installation and use. Keep this guide to have it available when needed.

If you need additional assistance please visit us at [ChargeTech.com/Contact](https://www.chargetech.com/Contact), call us at 888-250-8756, or email us at support@chargetechsolutions.com

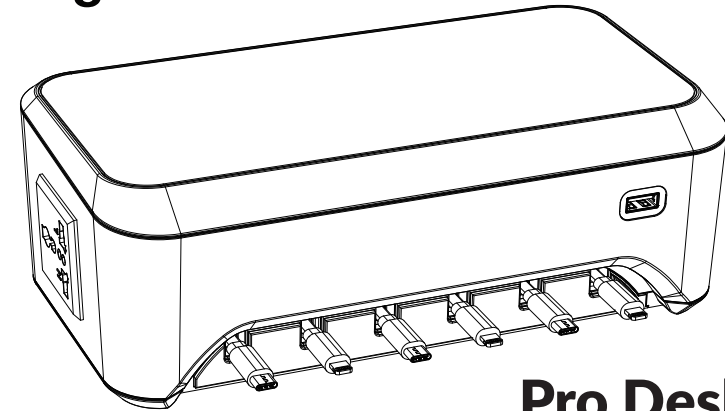

Pro Desktop

Charging Station

Model: CS9

SKU: CT-30016

A. Descriptions and Functions:

Your CS9 charges 6 devices simultaneously. It also provides 1 universal type power outlet, 1 USB port, and 1 Qi wireless charging pad for charging any laptop computer and other devices.

It works with all Apple, Android, and other popular devices.

B. Intended Use:



This product is for indoor use only in a dry area. Do not position in any location near water. Positioning this product outside or inside in a location near water may cause damage or injury to persons or property. Please ensure you carefully read and abide by the 'Safety Instructions'.

C. Safety Instructions:



ATTENTION!

We recommend a skilled electrician is used to assemble and disassemble the housing of the product to avoid risk of electric shock or electrical damage to the product.

- This product is not a toy and should not be used by children at any time. It contains small parts which can be swallowed and cause serious injury.
- Ensure the product is assembled and installed in a way that prevents a person tripping over the power cable or the unit falling from its location.
- Please ensure the packing materials are disposed off completely to prevent injury to children (such as box cuts or swallowing insulation materials).


Do not install in an area with high temperature, high humidity, or areas where the charging station may come into contact with water.
 Do not install near air conditioners, or in areas with excessive dust, smoke, or vibration.
 Do not modify or alter the product in any way. Any unauthorized modification or alteration will immediately void the Warranty.
 Do not use the product, or any parts, if they are damaged.
 All cables and adaptors should be connected and disconnected slowly and carefully.
 Ensure suitable packaging for transport of the product based on its 'Specifications'.

D. Package Content:


- 1x CS9 Charging Station
- 1x Power Cable
- 1x User Manual

E. Connecting and Operating:

A Setup Guide

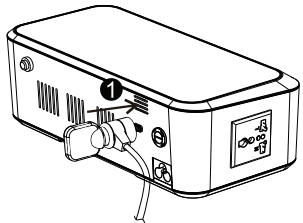


- ① Secure the Charging Station in place with Kensington lock (Not included).

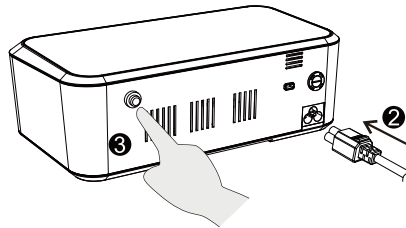


- ② Connect power cord.
- ③ Press power button for LED Light.


B Change of Cable

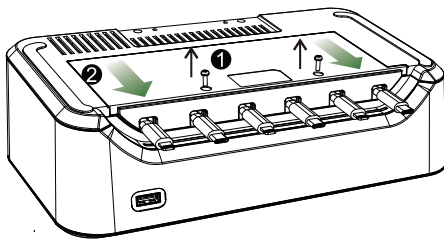

 - ① Take off the 2 x screws on the bottom.
- ② Remove the Bottom Panel Cover.

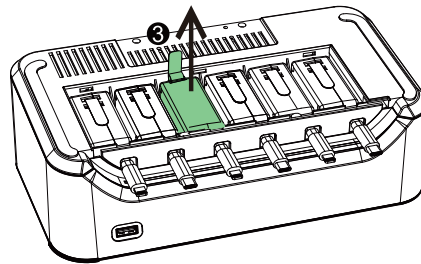

 
- ③ Pull tab to remove a cable and place a new one.
- ④ Screw the Bottom Panel Cover back in.

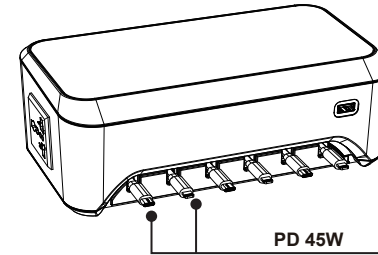

Supports PD45W fast charging

while using Lightning and Type-C cables
 Type-C cable PD 45W
 C94 Lightning cable PD 20W

 C Replace Fuse

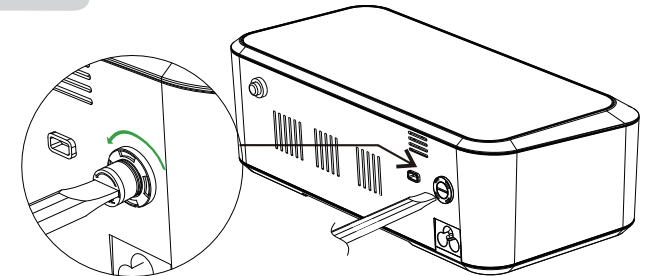

Fuse : 10A 250V
 Replace fuse when necessary

F. Care, Maintenance, Storage and Transport:



WARNING!

Please follow these instructions to avoid risk of electric shock and/or short circuit.

- The product is self-service, i.e. users do not require assistance to recharge their device.
- Always disconnect the power cord from the main power outlet first.
- Do not clean the product until the unit is powered off and unplugged from the main power outlet. Once unplugged, clean using a dry or slightly damp cloth. Avoid using cleaning products and do not allow liquid to enter the device.
- Do not install in a location where a person could potentially trip on the power cord or the product.
- During care, maintenance, storage and/or transport, avoid places that are wet, humid, or have a high temperature.
- Carefully read and abide by the Safety Instructions for care, maintenance, storage and transport.
- We recommend using the original packaging for transportation to protect the product from dust and humidity.